

Data Projector Instructions

WARWICK & LEAMINGTON BEEKEEPERS HITACHI DATA PROJECTOR - MODEL NO CPX2
PURCHASED 11/08, S/N CPX2WF/F8G006975

These notes have been produced as a quick aide-memoire and are very basic. Further information can be found in the projector's instruction book or on the CD provided with the projector.

1 - Important Notes - Before you Start

1.1 When you turn the projector off, wait until the cooling fan stops and the red "Power" light stops blinking and becomes steady red before removing the power cord.

1.2 Do not remove a USB memory stick without either following the software removal process or switching off the machine first.

2 - Turning on:

Connect power supply, remove lens cap and press standby/on button. Projector angle is adjusted using its feet. Image size and focus is adjusted on the lens. To adjust "keystone" effect, press keystone on the remote, make adjustments then press menu twice to remove adjustment bar from screen.

3 - Turning off:

Press standby/on button twice, wait until cooling fan stops and red power light stops blinking, then remove power cord.

4 - Connecting to Media Source

There are 2 main ways to connect to provide a "source": 4.1) Using the 15 pin "video out" cable on the computer attached to the video on the projector, 4.2) using a USB drive without using a computer at all. 4.1) is the easiest using the projector as an extension of the computer screen. 4.2) is ideal when a pre-prepared presentation has been stored on a USB memory stick and is referred to as "PC-less presentation" mode.

4.1 - Using the 15 pin video cable

Connect the supplied cable between the computer and projector. Configure the computer to output video to an external screen, then press the input/enter button on the projector which should then find the signal. You may need to alter the computer's screen resolution to 1280 by 768 pixels to make the computer screen fit the projected image and/or use the "Aspect" button on the projector remote control.

4.2 - Using a USB memory stick

To do this, images must be stored in JPEG format in one or more directories/folders on the memory stick. Switch on the projector/insert the memory stick (any order). Then, using the remote control, press menu and using the arrow keys scroll down to "go to advanced menu", press enter, scroll down to "MIU"*, then use right arrow to go to MIU options and select "PC-less presentation" and press enter. If you then select "Directory", you can use the arrow keys to select the directory in which your presentation is stored. Once you have "thumbnails" on the screen, you can either have a continuous slide show or use the down arrow key on the remote control to select the next slide. To remove the memory stick, select advanced menu, MIU, service, remove USB, and then remove stick or turn projector completely off and then remove stick.